

[ c o r k s p o r t ]



### Installation Instructions for the CorkSport Oil Fill Cap

#### Tools required

- Just your hands
- Rag (optional)

**WARNING:** The oil cap can be hot once engine is up to full operating temperature. Use caution when removing cap from hot engine.

Step 1: Open your hood.

Step 2: Locate and remove the factory oil fill cap.

Step 3: Make sure the o-ring from the original oil cap comes off when you remove the stock cap. If the o-ring does not come off with the oil cap remove it by hand.

Step 4: Put a light coating of oil on the new o-ring on the CorkSport Oil Fill cap seal.

Step 5: Screw the CorkSport Oil Fill cap down and you are done.

Step 6: Take a soft cloth and wipe away the fingerprints and you are ready to go.

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK