

CorkSport


MAZDA PERFORMANCE

Installation Instructions for CS Shifter Extension Bushing

Tools required

- 14mm wrench or socket
- Flat Screw driver
- Floor Jack
- Jack Stands

- 1.0 Jack up your car and place it securely on the jack stands.
- 2.0 Remove the 14mm nut and large flat washer shown in the picture below.

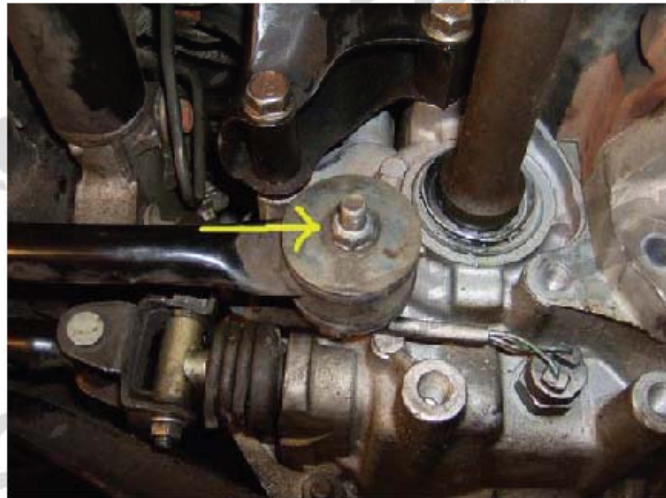

- 3.0 Pry out the stock rubber insert from the end of the shifter extension rod. Save the steel sleeve to be used for the new CorkSport shifter bushing.
- 4.0 Place the CorkSport shifter bushing inserts from both sides of the extension rod and insert the steel sleeve through the bushings.
- 5.0 Reinstall the flat washer and the 14mm nut and tighten. Lower the car on the ground off the jack stands are you are ready to go.

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK