

[ c o r k s p o r t ]



### CorkSport MX-3 Front Bumper Install instructions

#### Tools Required

- 1/4 and 3/8 Drive Ratchets
- 8mm Socket and/or Wrench
- 10mm Socket and/or Wrench
- Phillips Head Screwdriver
- Floor Jack
- Jack Stands

#### Contents

- CorkSport Front Bumper
- 11 Page Install Instructions
- 2 M4 x .70 Thread Bolts and Lock Nuts
- 2 "U" Shaped Metal Brackets
- 2 M6 x 1.00 Thread Bolts and Lock Nuts
- 2 Philips Large Head Screws

CorkSport recommends this bumper be installed by a professional auto body shop that has experience in aftermarket components. If you wish to install the bumper yourself we have included this set of instructions to help the Do-It-Yourselfer install the CorkSport bumper. Proceed at your own risk.

**TIP:** CorkSport recommends that you test fit the bumper before installation and painting to make sure the bumper fits properly.

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

NOTE: Installation of the CorkSport Mx3 bumper removes the mounting location for the side marker lights. Check with your local laws to make sure your car is legal for road use after installation.

Step 1: Remove two (2) 10mm head bolts from bumper brackets to core support.



Step 2: Remove two (2) 10mm head nuts from brackets on the back side of the grill.



Step 3: Remove two (2) Philips head screws from corner of each marker light. Disconnect lights bulbs and remove marker lights.



Pictures Continued on Next Page

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK





Step 4: Remove two (2) 8mm/Philips head screws from inside of marker light holes in bumper.



**DANGER:** Follow instructions that came with your jack/stands. Death and or significant property damage could result if you do not.

Step 5: Jack up front of vehicle and place securely on jack stands.

Step 6: Remove three (3) plastic clips from inside of main bumper opening.



Pictures Continued On Next Page

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK



Step 6: Remove one (1) 8mm Philips head screw from fender liners to bumper support bracket on both sides of MX-3.




Step 7: Remove two (2) 8mm/Phillips head screws from inner fender liner to vehicle on both sides of MX-3.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK



Step 8: With fender liner pulled back towards wheel, remove two (2) 10mm head nuts from bumper support to bumper, (one on each side).

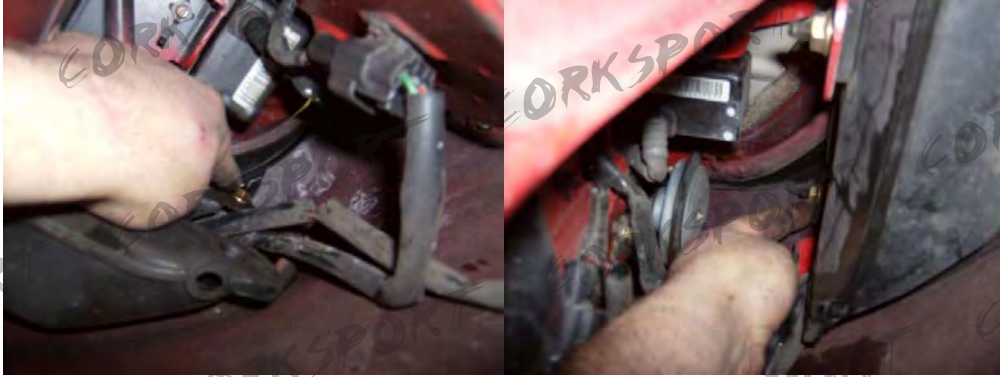

Step 9: Unplug side marker lights from both sides of bumper.



Step 10: Remove two (2) Philips head screws from corners of bumper to fender. Remove bumper from vehicle.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 11: With bumper removed from vehicle, remove two (2) plastic clips from side bumper brackets and 4 8mm head nuts from back of grill area. Remove the brackets from bumper



Step 12: Using original four (4) 8mm head nuts, place bracket on grill area of CorkSport bumper and tighten nuts.



Step 13: Install side brackets to CorkSport bumper and secure with original plastic clips.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK



Step 14: Place marker light wires through marker light holes in CorkSport bumper and position bumper onto vehicle.



Step 15: Install the two supplied large head Philips head screws into marker light location. You will need to secure the side marker light wiring by using a wire tie or similar from coming loose and falling under the car after the Philips screws are installed.




Step 16: Reconnect marker lights and install them into the bumper using the original Philips head screws.

Step 17: Install original two (2) 10mm head nuts onto bracket on back of grill and tighten.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 18: Install original 2 10mm head bolts through bumper brackets to core support.

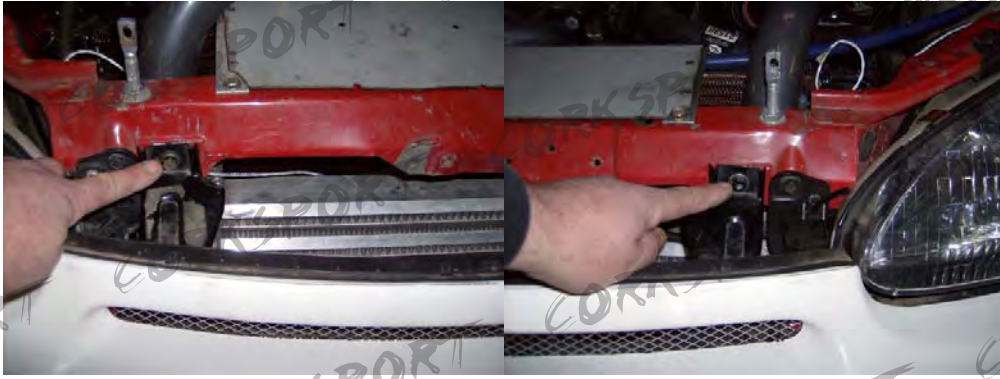

Step 19: Install three (3) original plastic clips into main opening of bumper.



Step 20: With fender liner pulled back towards wheel, reinstall two (2) 10mm head nuts to the bumper support brackets on the back side of bumper.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK



Step 21: Reinstall two (2) original Philips head screws into corners of bumper to fender.



Step 22: Reinstall fender liner and bumper support bracket to bumper using the supplied "U" shaped bracket with the supplied M4 nut and bolt to the bracket and the M6 nut and bolt to the bumper.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 23: Reinstall inner fender liners with their original 8mm/Phillips head bolts.



Remove vehicle from jack stands and enjoy the new look of your vehicle with the CorkSport front bumper.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK